 
 


GARDENA®
600 Gartenschere 190

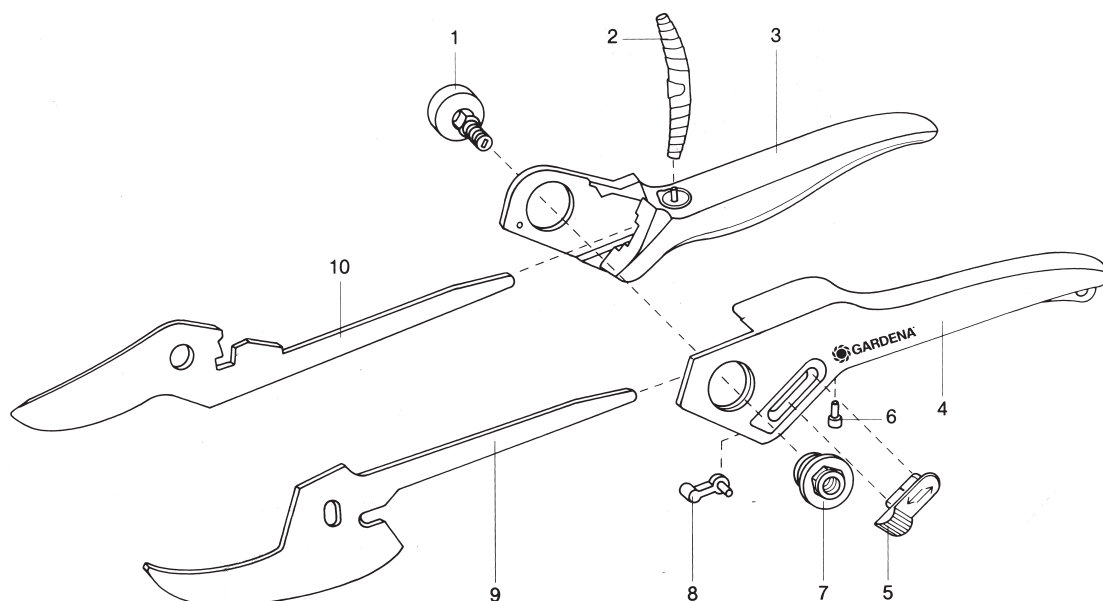

GARDENA®
601/603 Gartenschere 190 S / 215 S

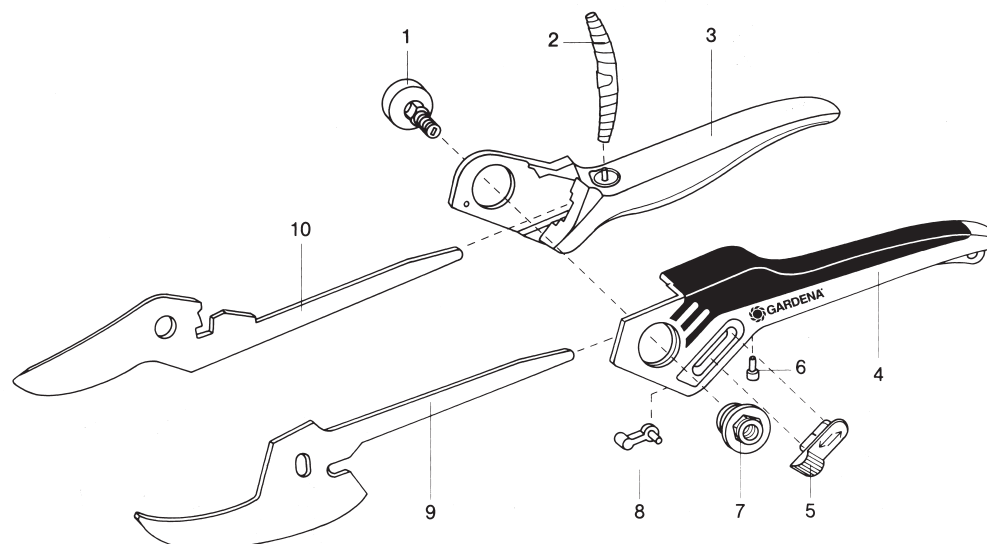

Art.-Nr.340

343-00.600.02

Garden Secateursuntil 1986

Spring

Art.-Nr.341-22

341-00.600.21

341-00.650.02

8700-00.600.13

8700-00.600.15

341-00.600.11

Secateurs Specialuntil 2005

Slide

Top blade, cpl.

Screw M6

Nut M6

Pressure spring

Art.-Nr.600

1

600-00.600.13

2

601-00.600.20

7

600-00.810.00

8

600-00.600.44

9

600-00.600.12

10

600-00.600.11

Secateurs 190

Screw

Spring

Nut, cpl.

Catch , cpl.

Bottom blade

Top blade

Art.-Nr.601

1	600-00.600.13	Screw
2	601-00.600.20	Spring
7	600-00.810.00	Nut, cpl.
8	600-00.600.44	Catch, cpl.
9	600-00.600.12	Bottom blade
10	600-00.600.11	Top blade, 165 mm

Sekatör 190 S**Art.-Nr.602**

1	600-00.600.13	Screw
2	601-00.600.20	Spring
7	600-00.810.00	Nut, cpl.
8	600-00.600.44	Catch, cpl.

Sekatör 190 SL

(Picture see art. 601/603)
until 2000

Art.-Nr.603

2	603-00.600.20	Spring (Art. 5353-20)
		Bottom blade
10	603-00.600.11	Top blade, 195 mm

Sekatör 215 S

until 2002

All other parts see art.601

Art.-Nr.604

1	600-00.600.13	Screw
2	603-00.600.20	Spring (Art. 5353-20)
7	600-00.810.00	Nut, cpl.
8	600-00.600.44	Catch, cpl.

Sekatör 215 SL

until 2000

(Picture see art. 601/603)